 


ONKYO

W800BT

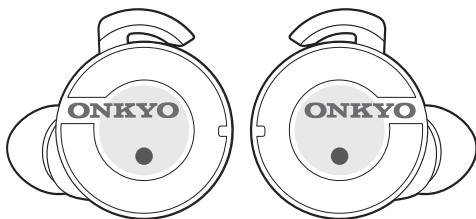

USER
MANUAL

Contents

1	Important safety instructions	2
	Hearing Safety	2
	General information	2

2	Onkyo Bluetooth wireless headset	3
	Box content	3
	Other devices	3
	Overview of your Bluetooth wireless headset	3

3	Charge and pair your headset	4
	Charge the battery	4
	Pair between both sides of the headset	5
	Pair your headset with the Bluetooth device	5

4	Use your headset	7
	Connect the headset to a Bluetooth device	7
	Operate your headset	7
	Wear your headset	8

5	Technical data	9
----------	-----------------------	----------

6	Notice	10
	Notice of compliance	10
	Disposal of your old product and battery	10
	Trademarks	11

7	Frequently asked questions	12
----------	-----------------------------------	-----------

1 Important safety instructions

Hearing Safety



Danger

- To avoid hearing damage, limit the time you use headphones at high volume and set the volume to a safe level. The louder the volume, the shorter the safe listening time is.

Be sure to observe the following guidelines when using your headset.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume continuously upwards as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Using headphones with both ears covered while driving is not recommended and may be illegal in some areas while driving.
- For your safety, avoid distractions from music or phone calls while in traffic or other potentially dangerous environments.

General information

To avoid damage or malfunction:

Caution

 
- Do not expose the headset to excessive heat.
- Do not drop your headset.
- Headset shall not be exposed to dripping or splashing.
- Do not allow your headset to be submerged in water.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives.
- If cleaning is required use a soft cloth, if necessary dampened with a minimum amount of water or diluted mild soap, to clean the product.
- The integrated battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Risk of explosion if battery is replaced by an incorrect type. Replace only with the same or equivalent type.

About operating and storage temperatures and humidity

- Operate or store in a place where temperature is between -15°C (5°F) and 55°C (131°F) (up to 90% relative humidity).
- Battery life may be shorter in high or low temperature conditions.

2 Onkyo Bluetooth wireless headset


Box content

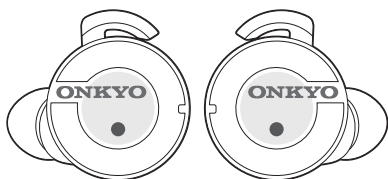


Onkyo Bluetooth wireless headset W800BT



 Replaceable rubber ear caps x 2 pairs

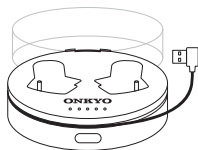

Charging case

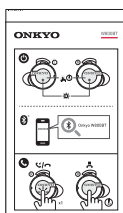 


Quick start guide

Other devices

A mobile phone or electronic device (e.g. notebook, PDA, Bluetooth adapters, MP3 players etc) which supports Bluetooth and is compatible to the headset (see 'Technical data' on page 6).

 Overview of your Bluetooth wireless headset

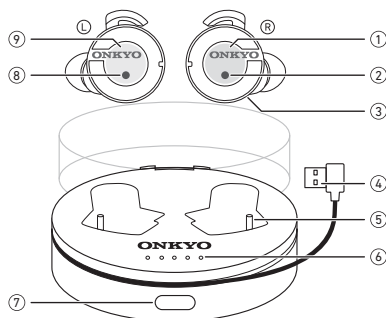

- ① On/off, call control button
- ② LED indicator
- ③ Microphone
- ④ USB cable (for charging)
- ⑤ Headset charging socket
- ⑥ Battery indicator
- ⑦ Battery indicator button
- ⑧ LED indicator
- ⑨ On/off button

3 Charge and pair your headset

 
Charge the battery

Note

- Before you use your headset/charging case for the first time, charge the battery for 5 hours for optimum battery capacity and lifetime.
- Use only the original USB charging cable to avoid any damage.
- Finish your call before charging the headset, as connecting the headset for charging will power the headset off.

Charging case

Plug the USB cable into the power source.
↳ The charging case starts charging.

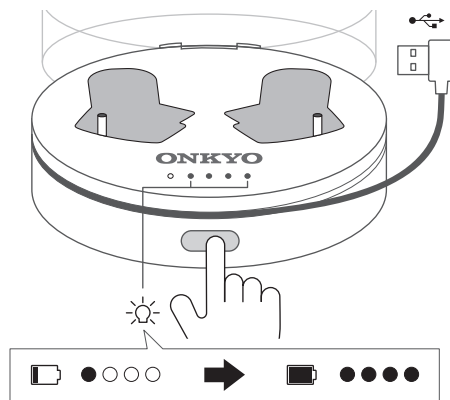


Tip

- Normally, a full charge takes 2 hours.
- When the charging case is charging, the battery indicator keeps flashing until charging is complete. There are 5 indicator lights. The leftmost LED light indicates the charging status. The other 4 LED lights indicate the battery level. Each LED light indicated 25% battery. When all 4 LED lights are turned on and stable, the charging case is fully charged.
- Press the battery indicator button to show the battery level status.

Headset

Place the headset on the charging case.

 - ↳ The headset starts charging.
- When the headset is charging, a white LED light will be displayed.
- When the headset is fully charged, the white light goes off.

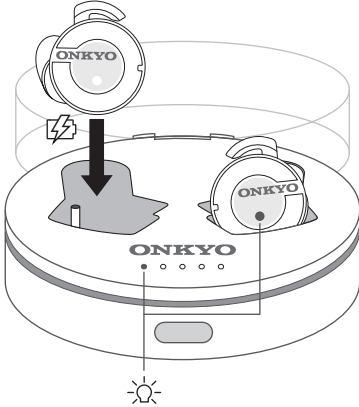

Tip

- Normally, a full charge takes 70 minutes.

Pair between both sides of the headset

- 1 Make sure that the headset is fully charged.
- 2 Press and hold the power on/off button on both sides of the headset for 2 seconds.
 - ↳ The white LED light on the left side of the headset flashes slowly after pairing with the right side of the headset.
 - ↳ The white LED light on the right side of the headset flashes rapidly. The headset is ready to pair with the Bluetooth device.

Pair your headset with the Bluetooth device

 
- 1 Turn on the Bluetooth function of your mobile phone.
- 2 Pair the headset with the mobile phone. For detailed information, refer to the user manual of your mobile phone.

Tip

- The headset stores the last 4 devices in the memory. If you try to pair more than 4 devices, the earliest paired device is replaced by the new one.

The following example shows you how to pair the headset with your mobile phone.

- 1 Activate the Bluetooth feature of your mobile phone, select Onkyo W800BT.
- 2 Enter the headset password "0000" (4 zeros) if prompted. For those mobile phones featuring Bluetooth 3.0 or higher, no need to enter a password.

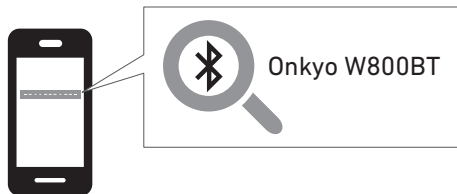

4 Use your headset

Connect the headset to a Bluetooth device

- 1 Turn on your mobile phone/Bluetooth device.
- 2 Press and hold the power on/off button for 2 seconds on both sides of the headset.
 - ↳ The white LED light on the left side of the headset flashes slowly after pairing with the right side of the headset.
 - ↳ The white LED light on the right side of the headset flashes rapidly. The headset is ready to pair with the Bluetooth device.
 - ↳ The headset is reconnected to the last connected mobile phone/Bluetooth device automatically.



Tip

- If you turn on the mobile phone/Bluetooth device or activate the Bluetooth feature after turning on the headset, you have to reconnect the headset and mobile phone/Bluetooth device manually.
- If your mobile phone/Bluetooth device cannot reconnect automatically, try to reconnect manually by clicking the headset's name again under the Bluetooth setting menu on your mobile phone/Bluetooth device.



Note

- If the headset fails to connect to any Bluetooth device within range in 5 minutes, it will switch off automatically to save the battery life.

Operate your headset

On/off

Task	Button	Operation
Turn the headset on.	On/off, call control	Press and hold for 2 seconds. ↳ You hear a power on signal tone.
Turn the headset off.	on/off, call control	Press and hold for 4 seconds. ↳ The white LED is on for 2 seconds and then the headset is off. ↳ You hear a power off signal tone.

Call control


Task	Button (right headset)	Operation
Pick up/hang up a call.	On/off, call control	Press once.
Reject an incoming call.	On/off, call control	Press and hold for 2 seconds.

LED indicator status

Headset status	Right side of the headset	Left side of the headset
Off/Charging is complete.	Off	Off
Unconnected between both sides of the headset.	N/A	The blue LED flashes slowly.
Ready for pairing between both sides of the headset.	The blue and white LEDs flashes rapidly.	The blue and white LEDs flashes rapidly.
Pairing with the Bluetooth device.	The white LED light flashes rapidly.	N/A
Paired and ready to use.	The white LED light flashes slowly ↳ One short beep.	The white LED light flashes slowly.
During music playback.	The blue LED flashes slowly.	The blue LED flashes slowly.
When there is an incoming call.	The blue and white LEDs flashes slowly	The white LED flashes slowly.
In a call.	The blue LED is on.	The white LED flashes slowly.
Charging is in progress.	The white LED is on.	The white LED is on.
Low battery level.	The white LED light flashes twice for every 10 seconds. ↳ Low battery signal tone for every minute.	The blue and white LEDs flashes rapidly.

Wear your headset

 - 1 Push your headset inward and rotate it forward to ensure the winglet is nested inside the cavity above the ear canal.
- 2 Rotate your headset forward and backward accordingly for the best personal fit.

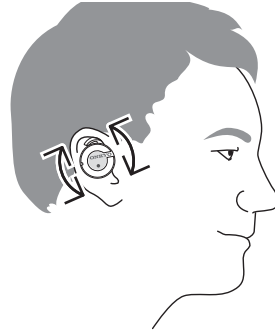

5 Technical data

Headset

- Play time: up to 3 hrs (up to 15 hrs with charging case)
- Standby time: 40 hrs (up to 200 hrs with charging case)
- Charging Time: 70 mins
- Rechargeable Li-ion battery: 55mAh
- Bluetooth 4.1, Bluetooth mono support (Headset profile - HSP, Hands-Free Profile - HFP), Bluetooth stereo supported (Advanced Audio Distribution Profile - A2DP)
- Operating range : Up to 10 meters (33 feet)
- Digital noise and echo reduction
- Auto power off

Charging case

- Charging time: 2hrs
- Rechargeable Li-ion battery : 900mAh
- Number of recharges supported: 5



Note

- Specifications are subject to change without notice.

6 Notice

Notice of compliance

Notice for US

This set complies with the FCC rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:

- ① This device may not cause harmful interference, and
- ② This device must accept any interference received, including interference that may cause undesired operation.

FCC rules

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Warning: Changes or modifications made to this equipment not expressly approved by Gibson Innovations may void the FCC authorization to operate this equipment.

Model number: W800BT

Trade Name: **Onkyo**

Responsible party: Gibson Innovations USA Inc. 3070 Windward Plaza Suite F, Box 735 Alpharetta, GA 30005

Notice for Canada:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

IC Radiation Exposure Statement:

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Disposal of your old product and battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental

considerations. For disposal or recycling information, please contact your local authorities.

This product contains non-removable batteries:

- Do not incinerate. Batteries may explode if overheated.
- For disposal or recycling information, please contact your local authorities.

Trademarks

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Gibson Innovations Limited is under license. Onkyo® is a registered trade mark of Gibson Brands Inc. Other trademarks and trade names are those of their respective owners.

7 Frequently asked questions

My Bluetooth headset does not switch on.
The battery level is low. Charge the headset.

I cannot pair my Bluetooth headset with a mobile phone.
The Bluetooth is disabled. Enable the Bluetooth feature on your mobile phone and turn on the mobile phone before you turn on the headset.

Pairing does not work.
Make sure the headset is in pairing mode.

- Follow the steps described in this user manual (see 'Charge and pair your headset' on page 4).
- Make sure that the LED light flashes rapidly on the right side of the headset.

The mobile phone cannot find the headset.

- The headset may be connected to a previously paired device. Turn off the connected device or move it out of range.
- Pairing may have been reset or the headset has been previously paired with another device. Pair the headset with the mobile phone again as described in the user manual (see 'Charge and pair your headset' on page 4).

My Bluetooth headset is connected to a Bluetooth stereo enabled mobile phone, but music only plays on the mobile phone speaker.
Refer to the user manual of your mobile phone. Select to listen to music through the headset.

The audio quality is poor and crackling noise can be heard.
The Bluetooth device is out of range. Reduce the distance between your headset and Bluetooth device, or remove obstacles between them.

The audio quality is poor when streaming from the mobile phone is very slow, or audio streaming does not work at all.
Make sure your mobile phone not only supports (mono) HSP/HFP but also supports A2DP (see 'Technical data' on page 9).

Why is there a lag between the sound and video when I use the ONKYO True Wireless Headphones for watching videos or playing games?
Constant audio lag behind video scenes would be found when you are watching videos or playing games with the ONKYO True Wireless Headphones. The audio lag is due to the time for audio synchronization between the left and right sides of the headset, so the audio may have delay compared to the video scenes. Audio lag is not a problem for listening to music with the Onkyo True Wireless Headphones.

For further support, visit
www.onkyo-headphones.com

ONKYO

www.onkyo-headphones.com

2016 © Gibson Innovations Limited. All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Onkyo® is a registered trade mark of Onkyo Corporation. Other trademarks and trade names are those of their respective owners.

